


# ASSEMBLY INSTRUCTION

## SLIDING DOOR Movano H2 EU


Doc No: 103923

Revision: 01


Composer file: 103927

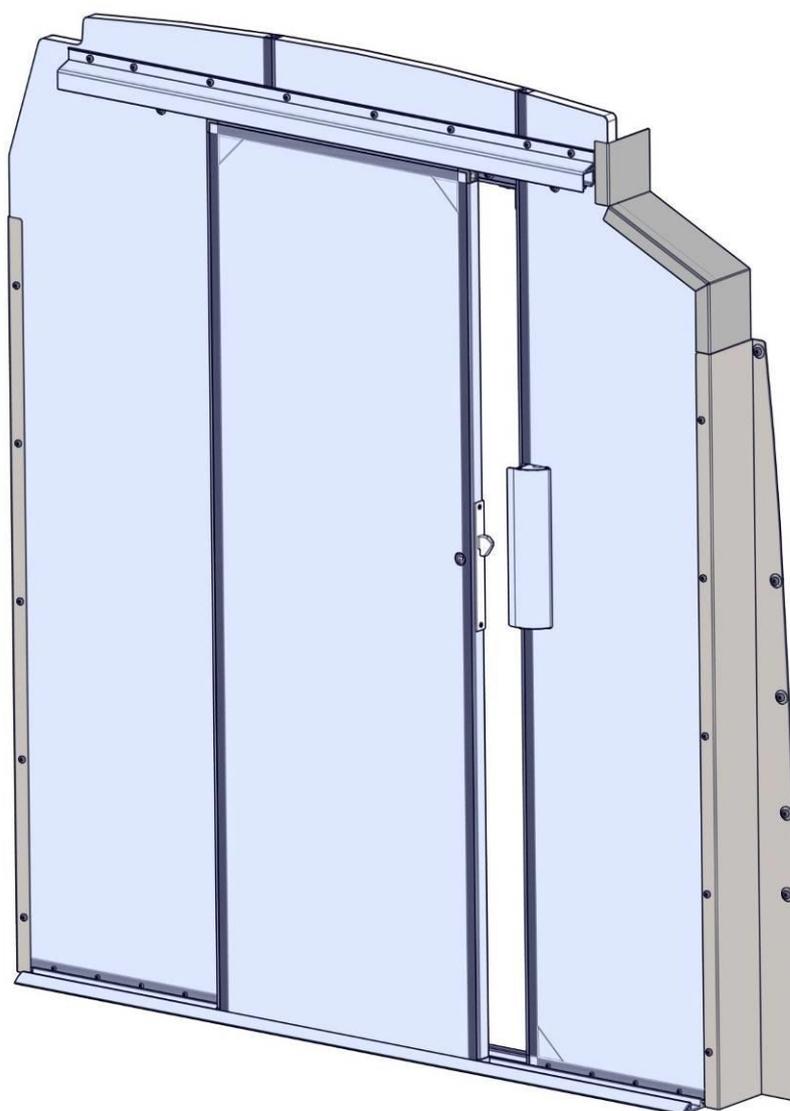

# Exploded view

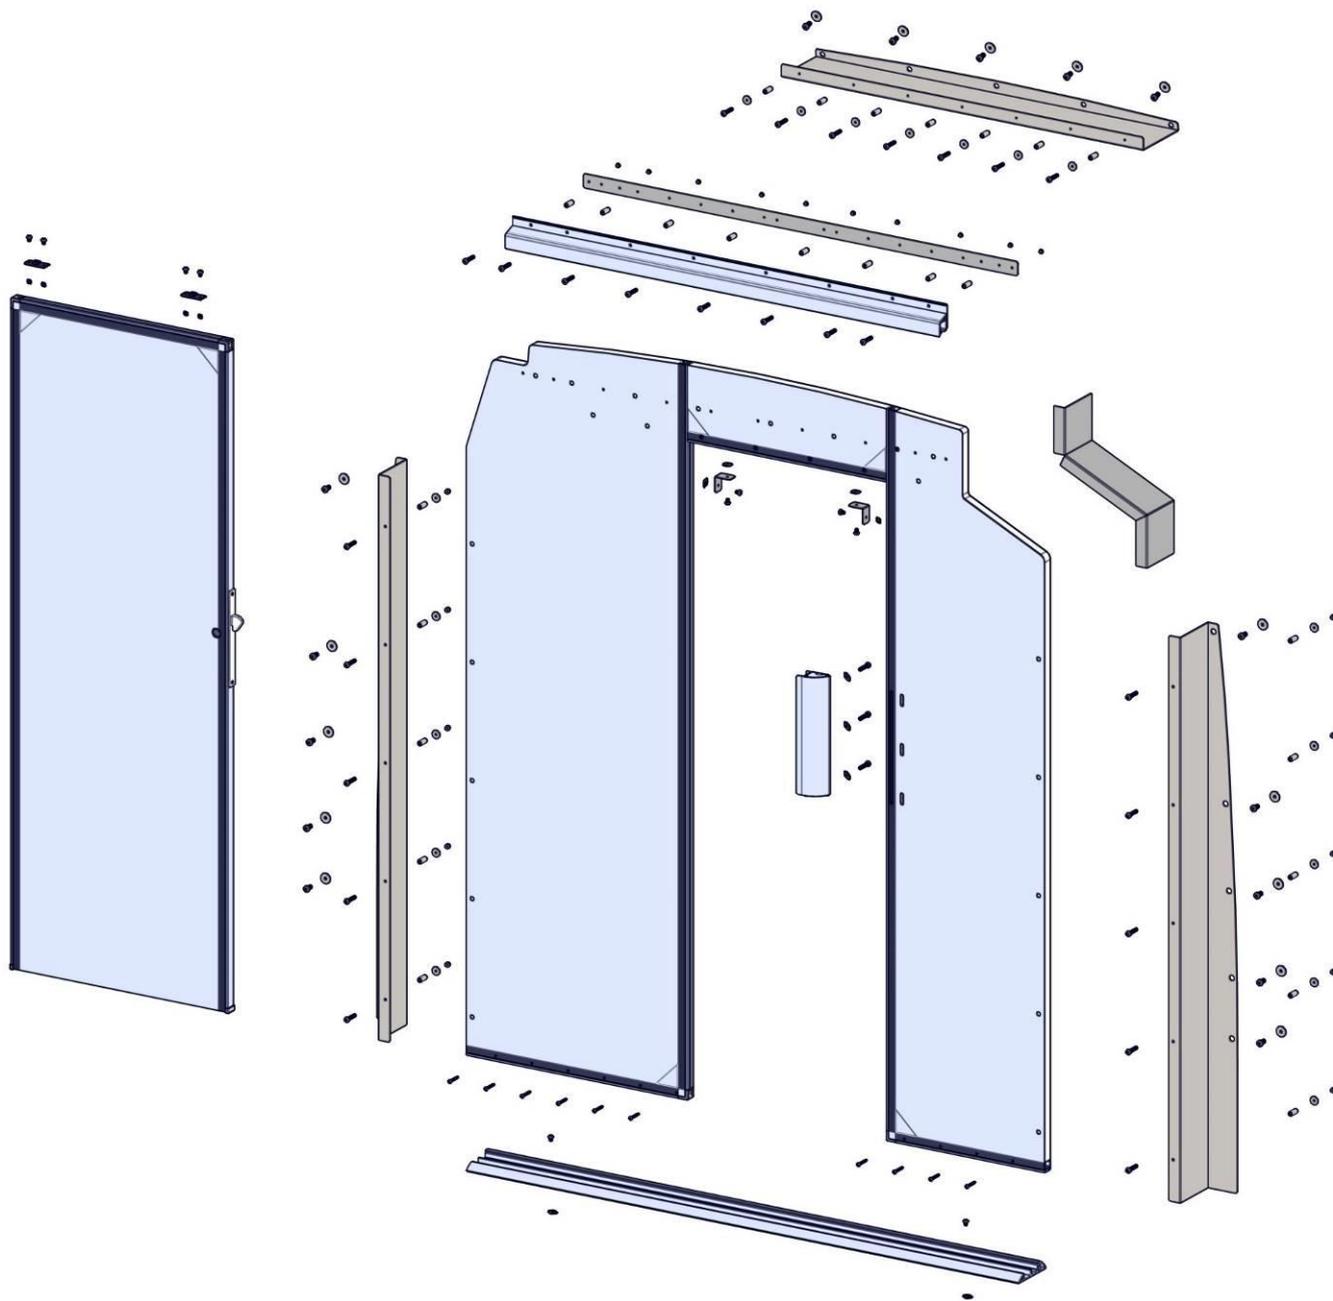


# Fittings


 <p>R11845 - Steel rivet 4,8x8</p>	 <p>R4517 - Screw MRT M6x8 FZB</p>	 <p>R50350 - T-track nut M6 8x23x8</p>	 <p>R6265 - Spacer 10x1,5x26</p>
 <p>R6329 - Screw MRT M6x35 FZB</p>	 <p>R50617 - Safety screw 10,8 M8x12</p>	 <p>R6312 - T-track nut M8 12x35x8</p>	 <p>R6336 - Washer 6,4x20x1,5</p>
 <p>R6330 - Screw MRT M8x16 FZB</p>	 <p>R6300 - Locking Nut w flange M6 FZB</p>	 <p>R1008 - Screw M6S M6x10 FZB</p>	 <p>R6182 - Protection Cap - Bolt and Nut</p>
 <p>R6334 - Screw RXS 4,2x38 FZB</p>	 <p>R6338 - Washer 8,4x25x1,5</p>	 <p>Roller ball</p>	

# Instructions


- Fix the top plate on the front compartment side with Steel rivet 4,8x8. (Please give feedback whether the long plate or two short plates are used.)
- Use M6x8 and T-track nut to fix two brackets to the top corners of the opening.

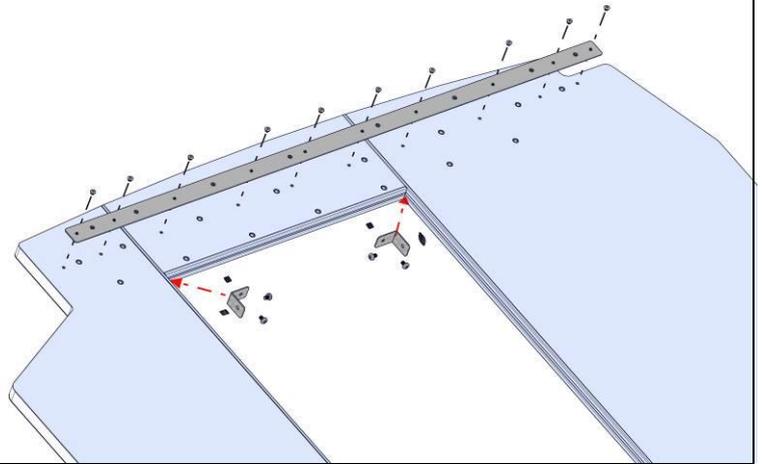


- Add support bar at the bottom of the lower part of the door opening. Recommended to use the 550mm sliding door support bracket accessory. Ordered seperately (Art no. 65781)
- Fasten the t-tracks.

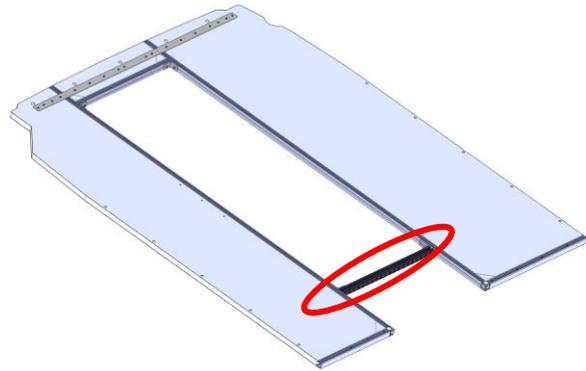


- Flip the door carefully.
- Mount the top rail, placing spacers in all hole and attach with M6x35 FZB screws.

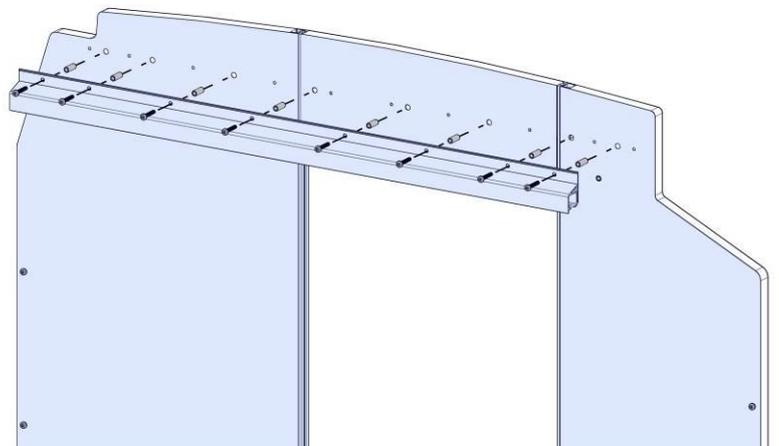


- Mount the bottom profile on the floor rails using M8x12 and T-track M8.
- If there is no floor rail, use appropriate length M8 screws and safety nuts.
- Note: Check position of rail with wall mounted before attaching it.

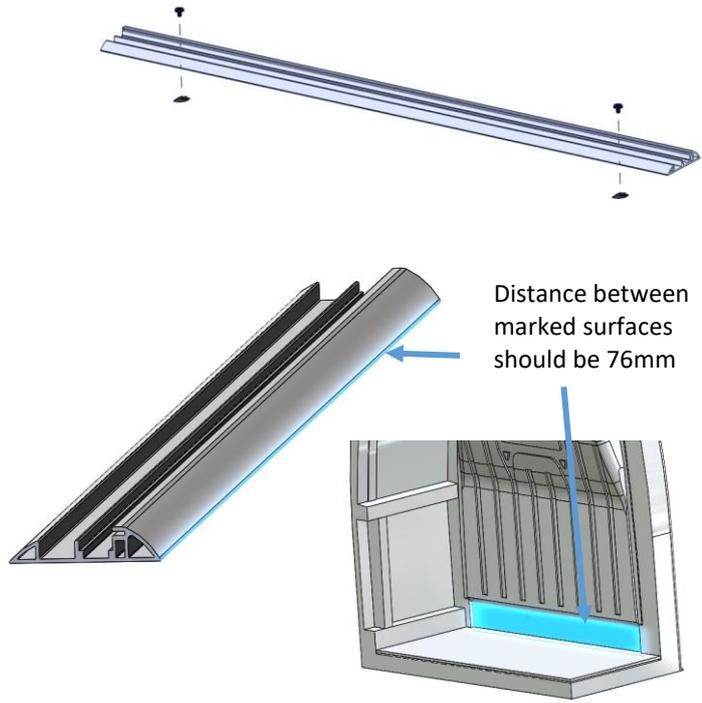


- Mount the top bracket to the middle beam.
- Use M8x16 FZB screws and washer.

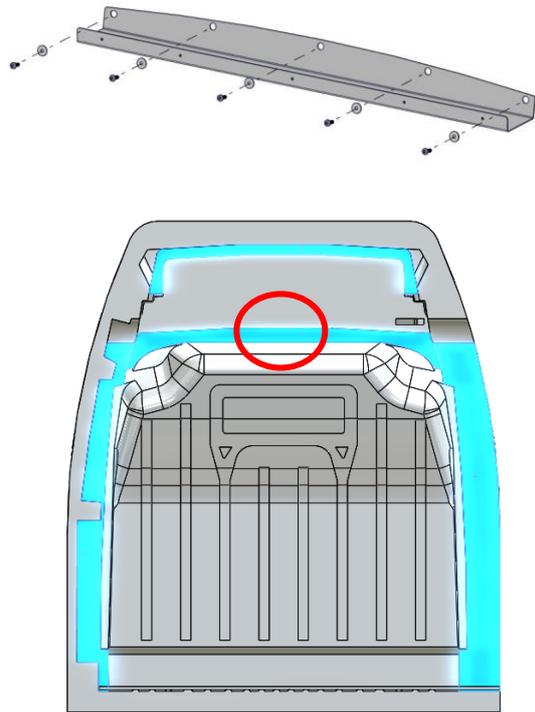


- Place the wall on the bottom rail.

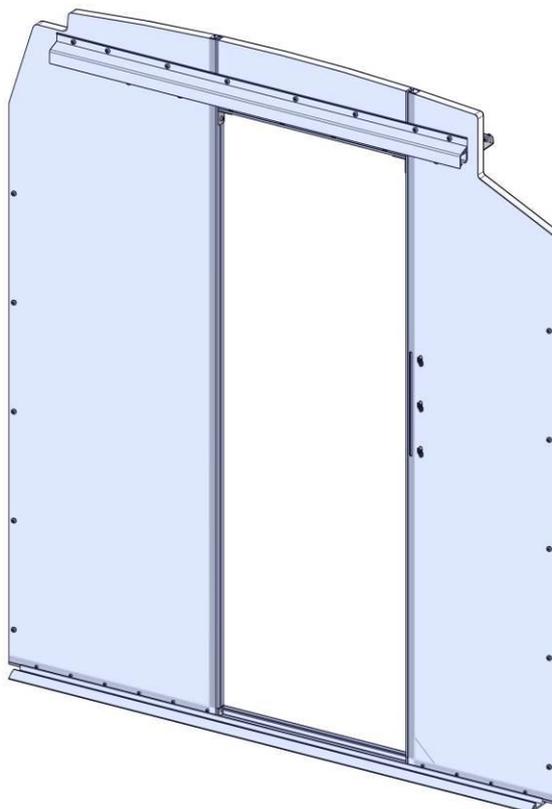



- Mount the wall to the top bracket. Place spacer in all holes, use washers before attaching with M6x35 FZB screws.

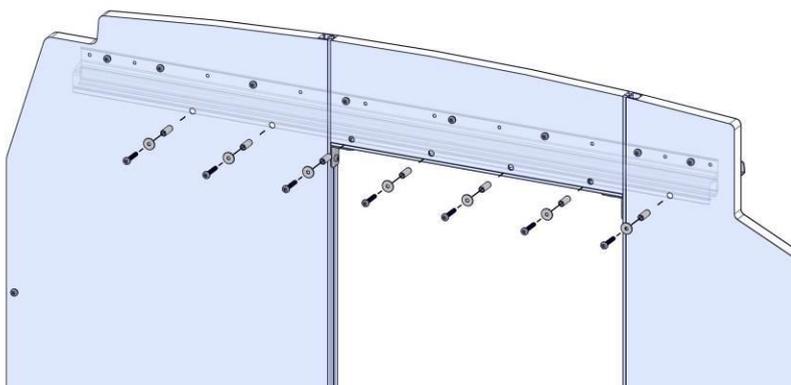


- Attach side brackets to the car beam.
- Use M8x16 FZB screws. Put the washer in between the screws and the flange.

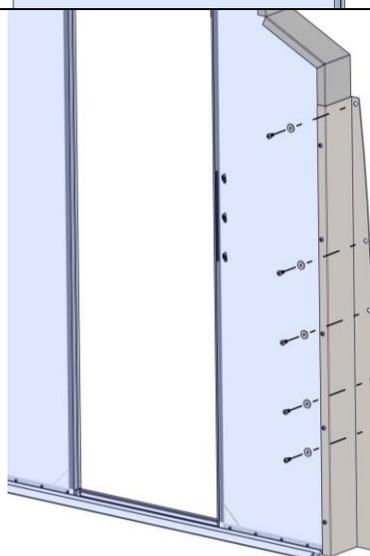

- Mount side brackets to the wall on both left and right.
- Use M6x35 FZB screws. Put spacers from the back, add washer then fix with nuts with flange.

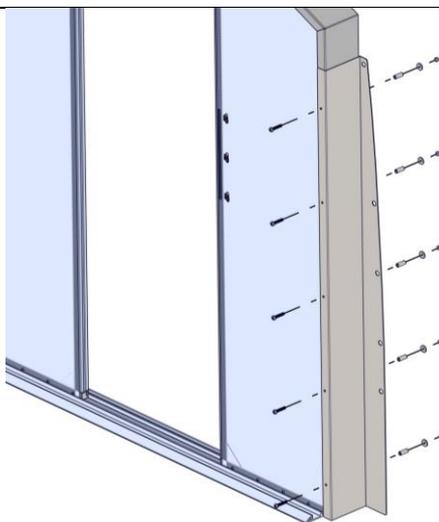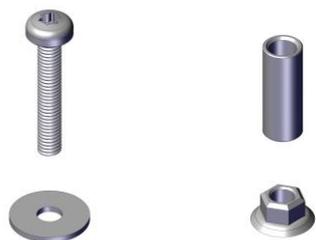


- Mount the top of the door blade with brackets using M6x8 FZB screws and T-track nuts.
- Note the distance of the brackets.

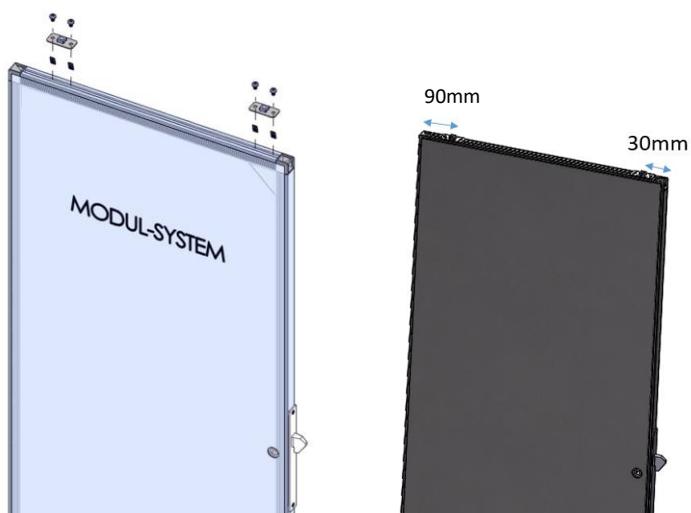


- Assemble the roller ball in to the brackets.




- Place the door in the top rail by sliding it in from the side.

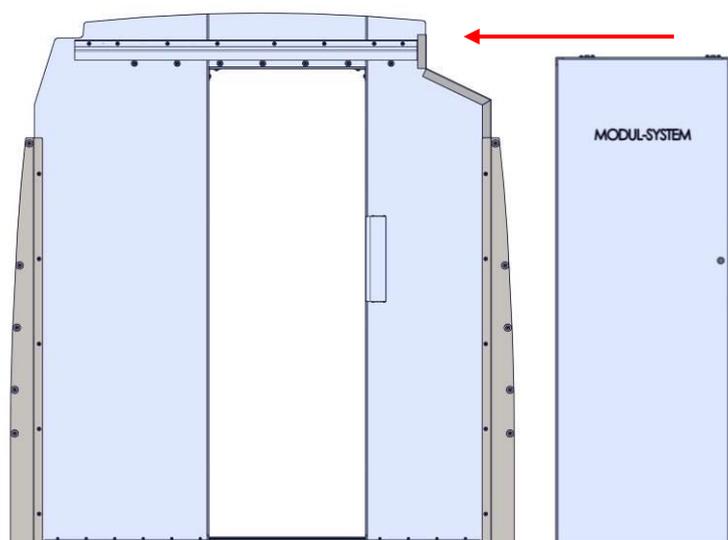

- Fasten the striker by placing M6x35 screws in the hole from passenger side. Fasten with T-track nut and push them back to the slot.
- Insert the sticker profile in the slot cut and push sideward.
- Fasten with T-track nuts.

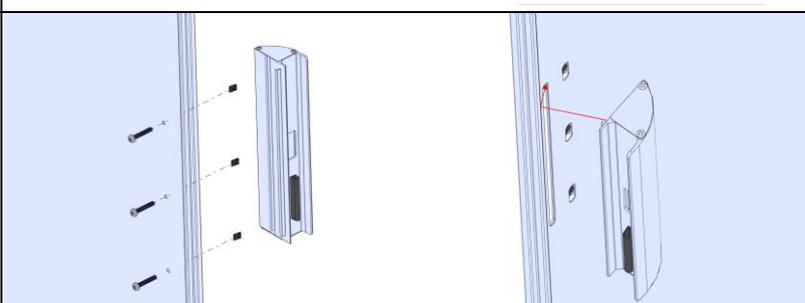

- Fix the bottom of the wall to the rail with self cutting screw 4,2x38mm
- Remove support bar.

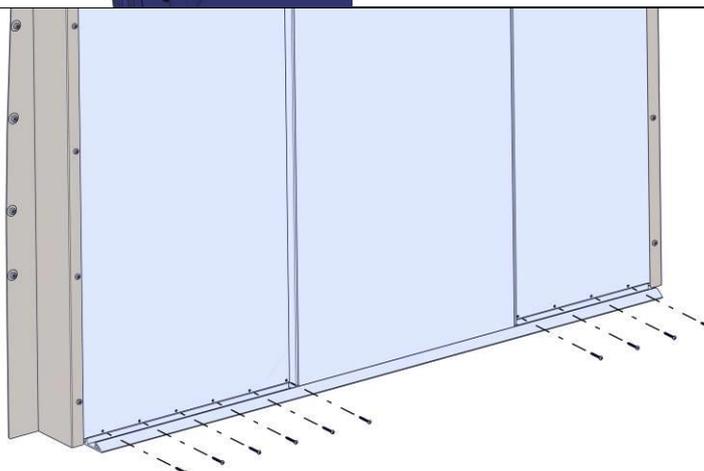

- Assemble handles on lock and door stop
- Align the doorstop with the handle of the lock.
- The doorstop is an M6S M6x10mm fastened in the t-track of the door opening.
- Place a plastic cover hat on the head of the screw.

